



IDENTIFICATION FIELD GUIDE

Indramat nameplate and photo checklist

Capture the evidence that separates a visual match from a configuration match.

For maintenance, purchasing and storeroom teams identifying motors, drives, power supplies and controls.

01	Keep every letter, number, decimal, slash and suffix from the physical label.
02	Photograph the complete unit before disconnecting cables or removing modules.
03	Record the machine, axis, fault display and urgency with the part number.

Identification begins with the installed label. Database records and visual similarity do not override the complete physical type code.

READY FOR REVIEW?
Send the complete code, photos and machine context.

210-680-9570
sales@litcoautomation.com
www.indramat.com

Litco Automation is an independent supplier and repair provider and is not an authorized Bosch Rexroth distributor. This Litco field guide is not a Bosch Rexroth publication and does not replace current factory documentation. Indramat and Bosch Rexroth names and trademarks belong to their respective owners.

The four-photo sequence

- 01 - Nameplate: straight on, sharp, glare-free and large enough to read.
- 02 - Full unit: show the complete motor, drive, supply or control.
- 03 - Interfaces: capture connectors, shaft, flange, modules, fans and cooling.
- 04 - Installed context: show the cabinet position, adjacent hardware and cable labels.

Transcription rules

- Copy the code exactly. Do not remove leading zeroes or punctuation.
- Record separate material, serial, firmware and revision numbers.
- If one character is uncertain, mark it with a question mark instead of guessing.
- Keep a photo of any programming, software or removable memory module.

What to send with the photos

- Machine manufacturer and model, axis or function, and installed system family.
- Displayed fault or symptom, what changed recently, and whether the unit still powers up.
- Needed-by date, destination and whether you need availability, repair or exchange review.

READY FOR REVIEW?

Send the complete code, photos and machine context.

210-680-9570

sales@litcoautomation.com

www.indramat.com

Litco Automation is an independent supplier and repair provider and is not an authorized Bosch Rexroth distributor. This Litco field guide is not a Bosch Rexroth publication and does not replace current factory documentation. Indramat and Bosch Rexroth names and trademarks belong to their respective owners.